

LUXEIRD

***HEATING MAT +
CONTROLLER***

HD02

USER MANUAL



Please keep this manual properly for future reference. You can also scan the QR code to visit our official website for multi-language manuals. For any usage issues, please feel free to contact us at **cs@luxbird.com**.

OVERVIEW

This germination heating mat kit is designed to optimize seedling germination and accelerate seedling growth by providing steady, even heat. The main heating mat adopts an advanced one-to-multiple design, and up to 5 identical heating mats can be connected. With this heating kit, we can improve our indoor micro garden and make it easier to grow fruits and vegetables.

SPECIFICATION

Model Number	LB-HD02
Product Name	Heating Mat + Controller
Heating Mat Dimensions	10" x 20.75" (527*254mm)
Voltage	AC 230V 50Hz/AC 120V 60Hz
Controller Wattage	200W
Heating Mat Wattage	30W each
Temperature Range	0°C~42°C/ 32°F~108°F
Time Range	0-24H
Target Temperature	Settable (default=30°C)
Screen	NTC real-time temperature display
Waterproof Rated	IP67

 
OPERATION INSTRUCTIONS


♦ Heating Mat

1. Place the heating mat on a well-drained surface (no standing water).
2. Placing the mat on an insulated surface rather than a cold floor will raise the temperature of the mat, and covering the plant tray with a moisture shield or dome will help raise the temperature in the root area and keep the roots moist.
3. Plug the mat into a 230 volt power source.

4. Maintain the temperature of the root area at around 20°C~30°C (68-86°F), which will effectively improve the germination rate.

◆ Heating Controller

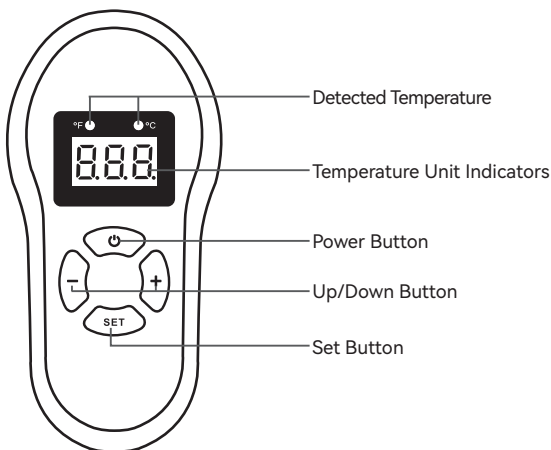

① **Startup/Shutdown:** When the product is connected to a power supply, the controller screen will light up for 3 seconds. Wait 3 seconds for the screen to dim, then press the  button to turn on the controller.

② Set Target Temperature:

Step 1: Press the **+** button to enter the setting of the target temperature.

Step 2: Press the **+** or **-** button to increase or decrease the temperature, ranging from 0°C to 42°C. Long press the **+** or **-** button to make a quick adjustment.

Step 3: Wait for 3 seconds with no operation, and the product will automatically save the settings and return to the working mode.

Tip for use: In the working mode, you can press the **+** or **-** button to view the target temperature you have recently set.

③ **°C/°F Selection:** Press the **SET** button to switch between °C and °F. You will see the corresponding °C or °F indicator light turn red.

④ Put the thermostat NTC probe into soil or demo to detect temperature.

⑤ **Set the Timer:**

 
Step 1: Press the **SET** button to enter the timer setting.

Step 2: Press the **+** or **-** button to set the time, ranging from 1 to 24 hours. Note that if the time is set to 000H, this means that the heating will never stop.

Step 3: Wait for 3 seconds of no operation, and the device will automatically save and exit the setting.

Please be assured that all settings will be saved in the controller even in the event of a power outage.


♦ How To Connect External Heating Mats

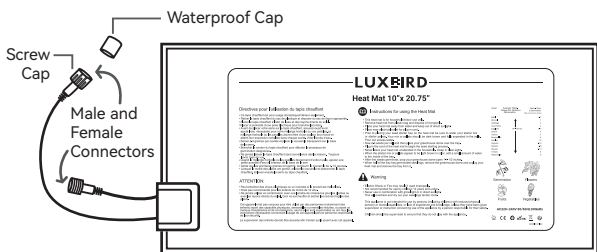

Step 1: Insert the male connector of the external heating mat into the female connector of the main heating mat (with the controller).




 
Step 2: Rotate the nut on the male connector of the external heating mat clockwise to secure the connection. Please note, do not remove the waterproof cap on the female connector of the external heating mat if not in use.



Step3: Repeat steps 1 and 2 to connect more heating mats.

  The controller can control up to 6 seedling heating mats (1 main mat + 5 external mats) at the same time, as shown in the picture below. Please note that this product only contains one external heating mat. For more external heating mats, please purchase them separately.

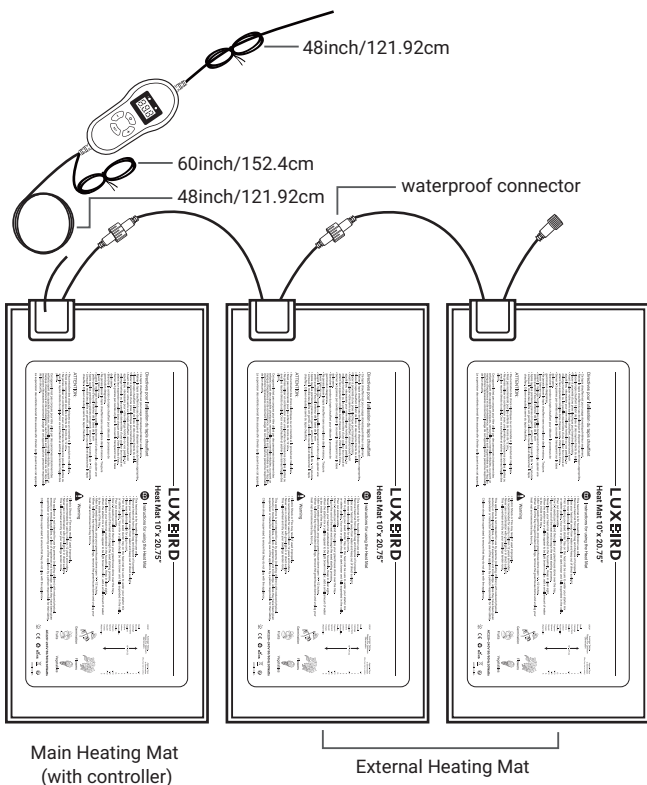


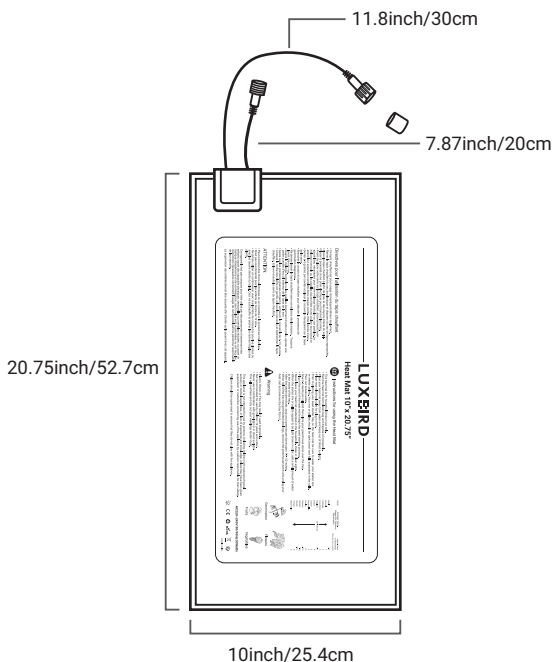

WARNINGS

1. Fire or electric shock may result from improper use.
2. Please keep the heating mat away from sharps.
3. Do not place the mat inside the tray or cover it directly with soil or growing medium.
4. Do not place any heat-insulating materials over the heating mat, as it may cause it to overheat.
5. Do not immerse the heating mat in water.

 Office address: Room 1803, Guowei Building, NO.68 Guowei Road,
Xianhu Community, Liantang, Luohu District, Shenzhen, China



XDH Tech
37 passage du Ponceau Bureau
270 75002 Paris
Email: xdh.tech@outlook.com



GOAL REACH CONSULTING LTD
OFFICE 1029 3 HARDMAN STREET 10TH FLOOR,
SPINNINGFIELDS MANCHESTER, UK M3 3HF
goalservice@hotmail.com



MADE IN CHINA